

SMART

300/301/306/350/360/366

Bodenstaubsauger

Vacuum Cleaner

Aspirateur traîneau

Aspirapolvere

Vloerstofzuiger

Aspirado de polvo

Aspirador

Elektrikli süpürge

Ηλεκτρική σκούπα

Gebrauchsanweisung

Operating Instructions

Mode d'emploi

Istruzioni per l'uso


Gebruiksaanwijzing

Instrucciones de uso

Instruções de utilização

Kullanma talimatları

Οδηγίες χρήσεως

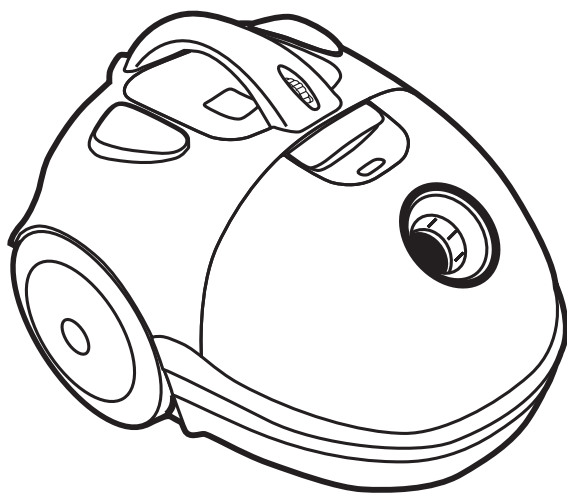

| | |
|---|---|
| Ausstattung | 7 |
| Zubehör | 7 |
| Sicherheitshinweise | 7 |
| Inbetriebnahme | 8 |
| Die besten Ergebnisse erzielen | 8 |
| Wechsel des Staubbeutels | 8 |
| Staubbeutelwechselanzeige | 8 |
| Wechsel des Staubbeutels | 8 |
| Staubbeutel-Sicherheitsvorrichtung | 8 |
| Wechsel/Reinigen der Filter | 9 |
| Reinigen des Motorschutzfilters | 9 |
| Wechsel des Mikrofilters | 9 |
| Fehlersuche und -behebung | 9 |


| | |
|--|----|
| Dear Customer | 10 |
| Features | 10 |
| Accessories | 10 |
| Safety instructions | 10 |
| Getting Started | 10 |
| Getting the best results | 11 |
| Dust bag indicator and changing the dustbag | 11 |
| To change the dustbag | 11 |
| We recommend the dustbag is changed | 11 |
| Changing the filters | 11 |
| To clean Motor Protection filter | 11 |
| To change Micro filter | 12 |
| Troubleshooting | 12 |



| | |
|--|----|
| Votre Smart possède les caractéristiques suivantes | 13 |
| Les accessoires de votre Smart | 13 |
| Assurer votre sécurité | 13 |
| Mise en marche | 13 |
| Comment obtenir les meilleurs résultats | 14 |
| Indicateur de remplissage de sac et changement du sac à poussière | 14 |
| Pour changer le sac à poussière | 14 |
| Nous recommandons de changer le sac à poussière | 14 |
| Changer les filtres | 15 |
| Pour nettoyer le filtre de protection du moteur | 15 |
| Pour changer le microfiltre | 15 |
| Gestion des pannes | 15 |















| | |
|---|----|
| Le caratteristiche del Smart | 16 |
| Accessori dell'aspirapolvere Smart | 16 |
| Per la vostra sicurezza | 16 |
| Per cominciare | 16 |
| Per ottenere i migliori risultati | 17 |
| Indicatore di sacchetto pieno e come cambiare il sacchetto | 17 |
| Per cambiare il sacchetto | 17 |
| Raccomandiamo di cambiare il sacchetto della polvere | 17 |
| Cambio dei filtri | 18 |
| Diagnosi dei guasti | 18 |

| | |
|--|----|
| Kenmerken van uw Smart | 19 |
| Hulpstukken voor uw Smart | 19 |
| Veiligheid voorop | 19 |
| Voordat u begint | 19 |
| Optimale resultaten | 20 |
| De stofzakindicator en het verwisselen van de stofzak | 20 |
| Als u de stofzak wilt verwisselen | 20 |
| Wij raden u aan om de stofzak vervangen | 20 |
| De filters vervangen | 21 |
| Het motorbeschermfiltre schoonmaken | 21 |
| Het Microfilter vervangen | 21 |
| Problemen oplossen | 21 |

| | |
|--|----|
| Estimado cliente | 22 |
| Las características de su Smart | 22 |
| Accesorios para su Smart | 22 |
| Para garantizar su seguridad | 22 |
| Listo para comenzar | 22 |
| Cómo obtener los mejores resultados | 23 |
| Indicador de llenado de bolsa y cambio de esta | 23 |
| Para cambiar la bolsa de recogida de polvo | 23 |
| Recomendamos que se cambie la bolsa de recogida de polvo | 23 |
| Cambio de los filtros | 24 |
| Modo de limpiar el filtro de protección de motor | 24 |
| Para cambiar el Micro Filtro | 24 |
| Reparación de averías | 24 |

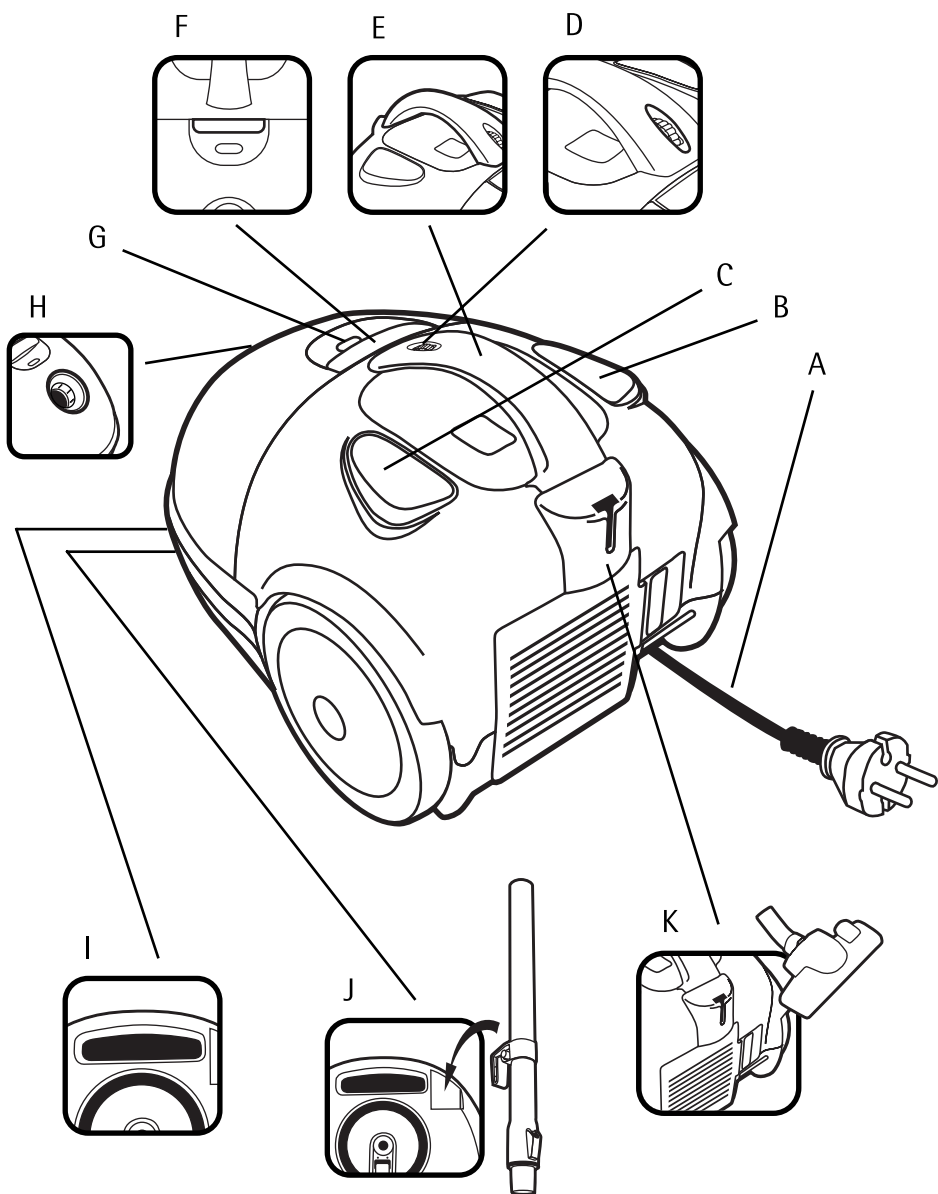

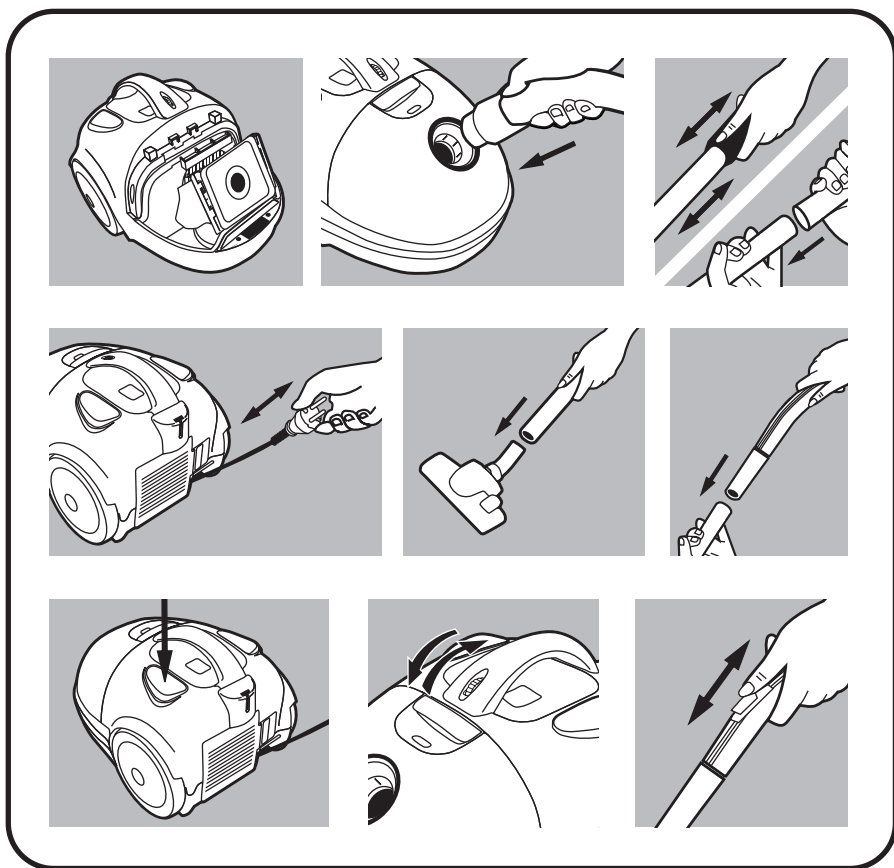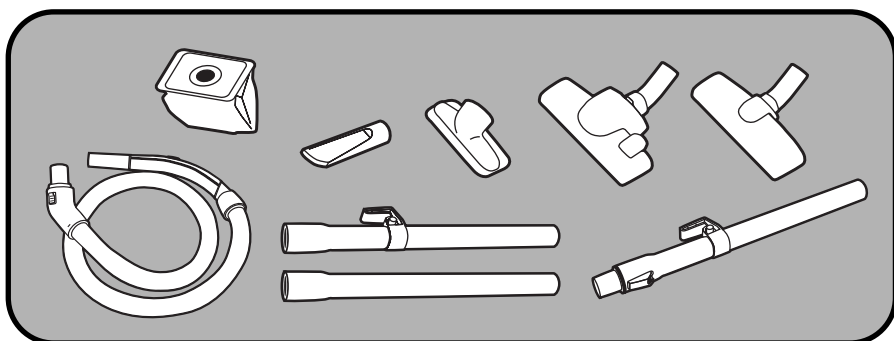

 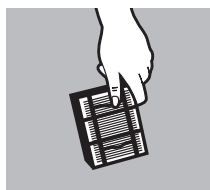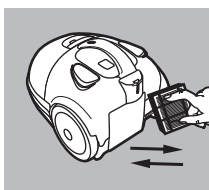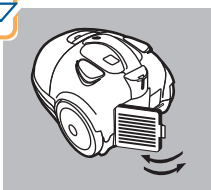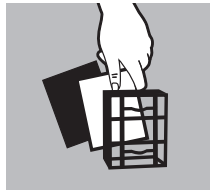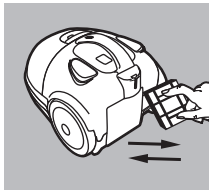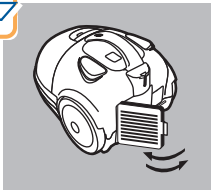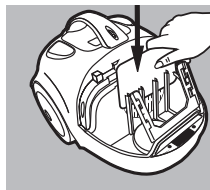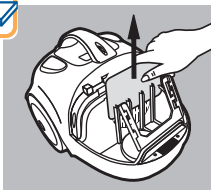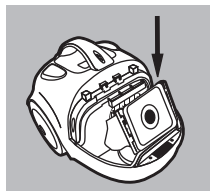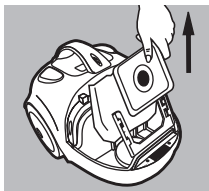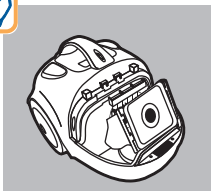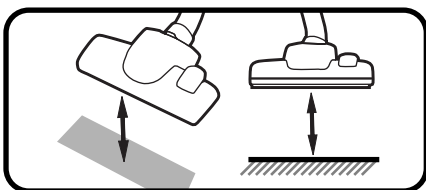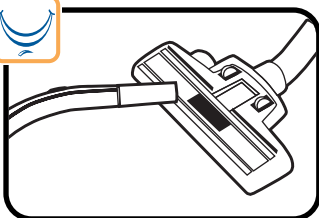

Dear Customer

Thank you for choosing an AEG SMART cleaner. To ensure total satisfaction, read this Instruction book carefully.

Features (see page 3)

- A Mains cable
- B Cable rewind button
- C On/off button
- D Suction control (306;350;360;366)
- E Multifunction handle
- F Cover release catch for dustbag compartment
- G Dustbag indicator
- H Hose connection
- I Carrying Handle
- J Storage slot for floor nozzle and extension tubes when not in use
- K Storage slot for floor nozzle and extension tubes when in use



Accessories (see page 4)

- Dust bags
- Extension tubes (x2) (300;301)
- Telescopic tube (306;350;360;366)
- Swivel hose and handle with manual suction control
- Combination carpet/hard floor nozzle (301;306;350;360;366)
- Floor nozzle (300)
- Narrow crevice nozzle (301;306;350;360;366)
- Upholstery nozzle (301;306;350;360;366)



Safety instructions

The cleaner is for domestic use only and has been designed to ensure maximum safety and performance.

Please follow these simple precautions:

- The cleaner is double-insulated so it must not be earthed.

- The cleaner is only to be used by adults. Young children or infirm persons should be supervised to ensure that they do not play with the appliance.
- Always store in a dry place.
- Do not use to pick up liquids.
- Avoid sharp objects.
- Do not pick up hot cinder or lighted cigarette ends.
- Do not use near flammable gases.
- Avoid tugging on the mains cable and check cable regularly for damage.
- **Note: Do not use your cleaner with a damaged cable. If damaged the cable should be replaced at an AEG Service Centre.**
- The Plug must be removed from the socket-outlet before cleaning or maintaining the appliance.
- All service and repairs must be carried out by authorised **AEG** service staff.



Getting Started (see page 4)



Check the dustbag is in place.



Insert the hose until the catches click to engage. (Press catches inwards to release).



Attach tubes or telescopic tube to the hose handle and floor nozzle by pushing and twisting together. (Twist and pull apart to dismantle).



Extend the cable and connect to mains. The cleaner is fitted with cable rewind, ensure cable is not twisted before use. (Press foot pedal to rewind. **Note: Please hold the plug to prevent it striking you or the machine).**



Press the On/Off button to activate the cleaner.



To decrease/increase suction, turn the rolling wheel on the multifunction handle (306;350;360;366).

Suction can also be regulated on the hose handle by opening/closing the aperture.



Getting the best results (see page 5)

- **Carpets:** Use the floor nozzle with the lever in horizontal position.
- **Hard floors:** Use the floor nozzle with the lever in vertical position.
- **Loose rugs/curtains/lightweight fabrics:** Reduce the suction power. Use the floor nozzle for loose rugs and the upholstery nozzle for curtains, cushions etc.
- **Confined areas:** Use the crevice nozzle for crevices, corners and radiators.






Dustbag indicator and changing the dustbag (see page 5)

For peak performance the dustbag must be changed when full. If the dustbag should accidentally get broken in the cleaner, take cleaner to an AEG Service Centre for cleaning. Check the dustbag regularly and replace when necessary. The dustbag indicator window will gradually turn red when filling and completely red when full.

To check the dustbag, the cleaner must be switched on, with all attachments connected and off the floor.

The dustbag full indicator may signify that the bag is blocked (occasionally caused by very fine dust) which will cause loss of suction and may result in overheating. If this occurs change the dustbag even if it is not full.

To change the dustbag

-  Release catch and swing back lid before removing the dustbag.
-  Remove the dustbag.
-  Insert new dustbag by fitting the bag slots over holders.

We recommend the dustbag is changed

- after using a carpet cleaning powder
- if there is a bad smell from the cleaner, then you should also change the filter
- **Note: Use only AEG original dustbags and filters (ref GR50).**

Dust bag safety device:

To avoid damaging the cleaner do not use it without a dustbag. A safety device is fitted which prevents the cover closing without a dustbag. Do not attempt to force cover shut.



Changing the filters (see page 5)

There are two filters inside your cleaner. Never use the cleaner without the filters in place.

To clean Motor Protection filter

The Motor Protection filter should be cleaned when dirty.



Release catch, remove the lid and the filter.



Wash the filter in warm water.



Allow to dry and re-insert the clear filter. Close the lid.

To change Micro filter

The Micro filter should be changed with every fifth dustbag.



Release catch, open the filter cover and remove filter with grill.



Take the filter out of the grill.



Insert new filter into the grill, put it back into the cleaner. Close the cover.

To change HEPA filter (366)



Release catch, open the filter cover.



Take the filter with grill out of the cleaner.



Insert new filter with grill, and close the cover.

Troubleshooting

- **Power:** If the electric power does not come on, **disconnect from mains** and check plugs, cable and fuses where appropriate.
- **Blockages/dirty filters:** The cleaner may switch itself off in the event of a severe blockage or excessively dirty filter(s). In such cases, disconnect from mains and allow to cool for 20-30 minutes.
Clear blockage and/or replace filter(s) and restart.
The clearing of blocked hoses is not covered by the guarantee.
Please also see AEG additional information towards the back of this booklet.
- **Water:** If water is sucked into the cleaner the motor must be changed at an AEG Service Centre.

AEG Hausgeräte GmbH
Postfach 1036
D-90327 Nürnberg

<http://www.aeg-hausgeraete.de>

© Copyright by AEG

3302 02 06 04



From the Electrolux Group.
The world's No.1 choice.